


PAIRING ANCHORLINK WIRELESS MICROPHONES

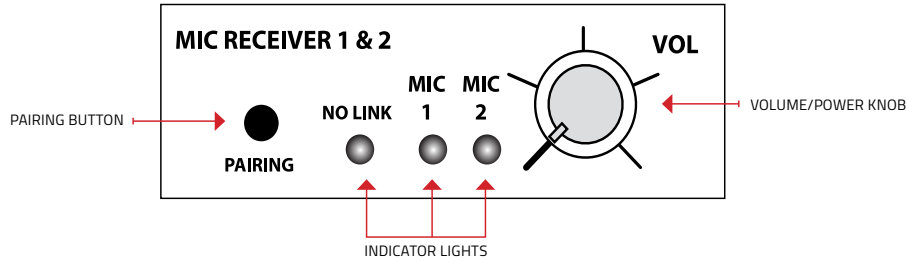

1. Turn on Mic Receiver (Volume knob clockwise) then hold Pairing button until green light for Mic 1 flashes, release button.
2. Turn on Mic then press and hold Mute button until Mic red light turns off, release button.
3. Press and hold Mute button again until Mic green light flashes.
4. The Mic is paired when the green light is solid on both the Mic and Mic Receiver.
5. Repeat these steps for Mic 2 on the same Mic Receiver (Mic 1 will stay paired through this process). If applicable, repeat these steps for Mic 3 and 4 on Mic Receiver 2.

NOTE: You may pair only one microphone at a time. Each Mic Receiver included supports two wireless microphones. Two Mic Receivers = Four wireless microphones supported. You will only need to pair your microphone once.

UN-PAIR WIRELESS MICROPHONES

1. Start with the speaker On and the Mic Receiver in the Off position (Volume knob turned counter-clockwise until 'click').
2. Press and hold the Pairing button on the Mic Receiver.
3. While holding the Pairing button, turn on the Mic Receiver (Volume knob clockwise).
4. Continue to hold the Pairing button. Lights will appear in the order listed below. Process takes approximately 25 seconds:
 - Mic 2 – Green blinking
 - No Link – Red blinking
 - Pause
 - Mic 1 – Green blinking
 - No Link – Red
5. Once the No Link red light is solid, both Mics have been un-paired.
6. Repeat these steps for the 2nd Mic Receiver (if included).

NOTE: This process un-pairs both Mics from a Mic Receiver. The Mics are not needed to un-pair from the Mic Receiver.

ACCLAIM TABLETOP LECTERN STORAGE IN ACL-BASE



BATTERY INFORMATION

AC Operation & Battery Charging

The Acclaim include an automatic charging system designed to properly charge and maintain the system's built-in Lithium Ion battery. To charge batteries, plug the system into an AC outlet and operate as normal while built-in batteries are charging. While unit is on, the battery fuel gauge will indicate the battery level. The BATTERY INDICATOR LED will show solid red light when charging and will show green light when charging is complete. Charge system overnight to replenish drained batteries.

Battery Maintenance & Storage

In order to ensure a long battery life, we encourage the following best practices for Lithium Ion battery maintenance and storage. Do not block any ventilation openings. When your lectern is not in use, it should be stored in a cool dry place. Do not expose your lectern to excessive heat, flames, or fire. Unplug the lectern during lightning storms. If storing lectern for an extended period of time, leave speaker unplugged.

Battery Safety

Refer all servicing to qualified personnel. Do not attempt to remove the rechargeable Lithium Ion battery from this product. The battery used in this device may present a risk of fire or chemical burn if mistreated. Please recycle or dispose of your speaker and/or battery properly based on the laws and rules of your municipality. Do not incinerate.

Interested in an extended battery warranty? Visit anchoraudio.com/extended-battery-warranty

HAVING TROUBLE WITH YOUR SOUND SYSTEM?

CONDITION	POSSIBLE SOLUTIONS
No Sound (<i>Power LED: OFF</i>)	<ul style="list-style-type: none"> • Turn POWER switch ON • Check battery level, charge battery, or plug in AC cord
No Sound (<i>Power LED: ON</i>)	<ul style="list-style-type: none"> • Ensure the gooseneck mic is properly inserted into the XLR input • Check your source audio and turn up volume of source audio • Make sure all cables are completely plugged in • Turn up volume control of input used
Wireless Mic will not Connect to System	<ul style="list-style-type: none"> • Check battery level of microphone • Un-pair all microphones from the system then re-pair the microphones
Connected Wireless Mic but No Sound (<i>Solid Green LED</i>)	<ul style="list-style-type: none"> • Check the Mute button on the microphone or belt pack • Raise volume on the microphone and system • Check battery level of microphone and system
Poor Wireless Range / Poor Wireless Audio Quality	<ul style="list-style-type: none"> • Check battery level of microphone and system • Re-position system away from any possible interference sources • Raise system onto a higher level (speaker stand) • Minimize obstructions between the system and wireless microphone • If wireless range continues to be poor, call Anchor Audio Tech Support
Distorted Sound	<ul style="list-style-type: none"> • Check battery level, charge battery, or plug in AC cord • Lower system volume • Lower source audio volume • Wireless belt pack - ensure Mic and/or Line Level setting is correct
Excessive Feedback (Squelching)	<ul style="list-style-type: none"> • Lower the volume on the microphone (handheld or belt pack) • Do not stand within at least 10 feet in front of the speaker with the mic(s)
Excessive Hum or Noise	<ul style="list-style-type: none"> • Use shielded cables (Example: EX-50PPS) • Use a balanced microphone

NEED MORE HELP?
anchoraudio.com | 800.262.4671



QUICK START MANUAL



100-0333-000 REV A

ACCLAIM

For a complete Owner's Manual, visit anchoraudio.com

Please check your new unit carefully for any damage which may have occurred during shipment.

*Please keep the product box(es) that your Anchor Audio product(s) was shipped in, so it is available in the event the product(s) need to be shipped back to Anchor Audio for any reason.